

SECURITRON MODEL STK-1 INSTALLATION INSTRUCTIONS TO RETROFIT MUNL-12/24 IN DOORS WITH SARGENT LOCKS


1. DESCRIPTION

The STK-1 kit allows Securitron Model MUNL Electric Strike to be retro-fitted into door frames that have a 4-7/8" ANSI strike and with doors that have SARGENT 7800 or 8200 Mortise Lock.

ORIGINAL FRAME


(After removing old strike)

Frame was prepared for a 4-7/8" ANSI strike. Strike and Mortise lock are 3/8" off center to center.

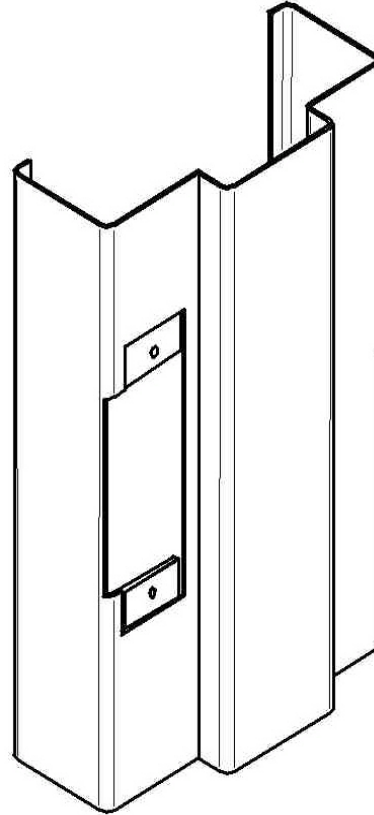

2. PHYSICAL INSTALLATION

Generally, physical installation is simply a matter of unscrewing the strike, and removing it., The old mounting tabs need to be cut away. After tabs have been removed, file down the lower edges approximately 1/16" to 3/32".

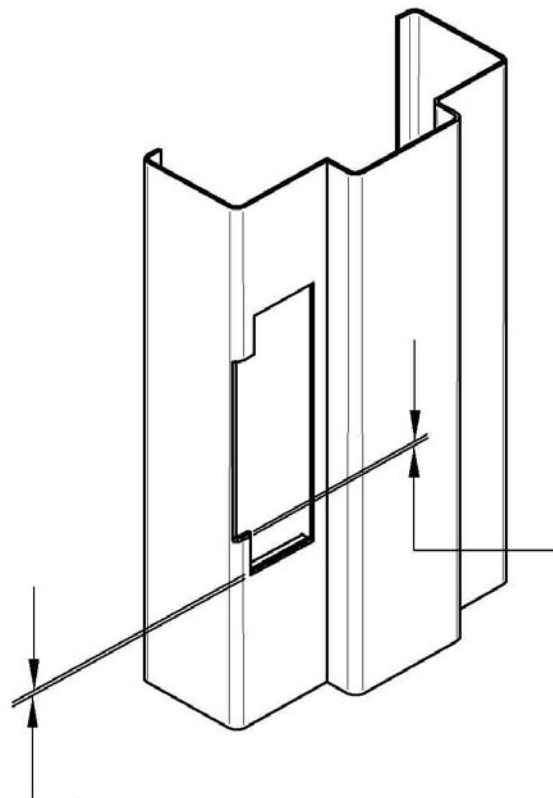

Screw new tabs to MUNL. Flip MUNL unit over and place into strike cutout, **making sure that unit is slid to bottom of filed cutout.** Mark new mounting holes using the tabs holes as a template. Remove tabs from MUNL, drill and countersink new holes in frame. Mount tabs inside frame using screws furnished in the STK-1, do not tighten down completely.

Position MUNL over new tabs and tighten screws from MUNL into tabs. Use spacers provided as necessary to have the MUNL level with surface of the frame. Then finally tighten the screws in the frame for final positioning.

