



≡ SECURITRON QUICK TIP ≡

QUICK TIP NUMBER: QT-iMXD-2

PRODUCT: iMXD-12 or iMXD-24 Integrated Movement Exit Delay system

DESCRIPTION: The standard configuration of the iMXD series of Exit Delay Timers will sound a local audible if the door is held open beyond the built-in By-Pass time. If extended open time is needed to move patients or furniture through the door try the following solution.

Simply wire a Normally Open Door Position Switch (DPS) between terminals “+” and “BP” of the iMXD. DPS must be mounted on the hinge side of header approximately 2”-3” from the hinge edge of the door.

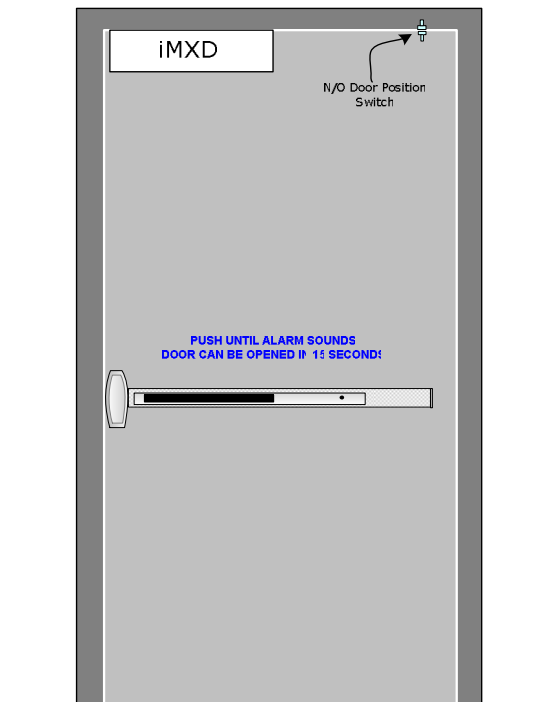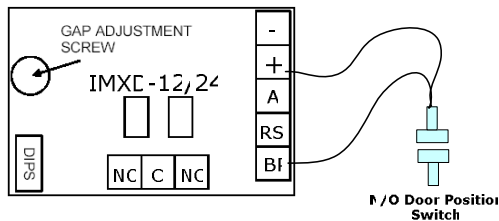

Modification of iMXD to extend door hold open time.